

Loc/Wissel/Sein decoder			Dipswitch							
Adres	Bediening	Keyboard	1	2	3	4	5	6	7	8
1	1- 4	1		2	3		5		7	
2	5 - 8	1			3		5		7	
3	9 - 12	1	1			4	5		7	
4	13 - 16	1		2		4	5		7	
5	17 - 20	2				4	5		7	
6	21 - 24	2	1				5		7	
7	25 -28	2		2			5		7	
8	29 -32	2					5		7	
9	33 -36	3	1		3			6	7	
10	37 - 40	3		2	3			6	7	
11	41 - 44	3			3			6	7	
12	45 - 48	3	1			4		6	7	
13	49 - 52	4		2		4		6	7	
14	53 - 56	4				4		6	7	
15	57 - 60	4	1					6	7	
16	61 - 63	4		2				6	7	
17	64 - 68	5						6	7	
18	69 - 72	5	1		3				7	
19	73 - 76	5		2	3				7	
20	77 - 80	5			3				7	
21	81 - 84	6	1			4			7	
22	85 - 88	6		2		4			7	
23	89 - 92	6				4			7	
24	93 - 96	6	1						7	
25	97 - 100	7		2					7	
26	101 -104	7							7	
27	105 -108	7	1		3		5			8
28	109 - 112	7		2	3		5			8
29	112 - 116	8			3		5			8
30	117 - 120	8	1			4	5			8
31	121 - 124	8		2		4	5			8
32	125 - 128	8				4	5			8
33	129 - 132	9	1				5			8
34	133 - 136	9		2			5			8
35	137 - 140	9					5			8
36	141- 144	9	1		3			6		8
37	145 - 148	10		2	3			6		8
38	149 - 152	10			3			6		8
39	153 - 156	10	1			4		6		8
40	157 - 160	10		2		4		6		8

Loc/Wissel/Sein decoder			Dipswitch							
Adres	Bediening	Keyboard	1	2	3	4	5	6	7	8
41	161 - 164	11				4		6		8
42	165 - 168	11	1					6		8
43	169 - 172	11		2				6		8
44	173 - 176	11						6		8
45	177 - 180	12	1		3					8
46	181 - 184	12		2	3					8
47	185 - 188	12			3					8
48	189 - 192	12	1			4				8
49	193 - 196	13		2		4				8
50	197 - 200	13				4				8
51	201 - 204	13	1							8
52	205 - 208	13		2						8
53	209 - 212	14								8
54	213 - 216	14	1		3		5			
55	217 - 220	14		2	3		5			
56	221 - 224	14			3		5			
57	225 - 228	15	1			4	5			
58	229 - 232	15		2		4	5			
59	233 - 236	15				4	5			
60	237 - 240	15	1				5			
61	241 - 244	16		2			5			
62	245 - 248	16					5			
63	249 - 252	16	1		3			6		
64	253 - 256	16		2	3			6		
65	257 - 260	17			3			6		
66	261 - 264	17	1			4		6		
67	265 - 268	17		2		4		6		
68	269 - 272	17				4		6		
69	273 - 276	18	1					6		
70	277 - 280	18		2				6		
71	281 - 284	18						6		
72	285 - 288	18	1		3					
73	289 - 292	19		2	3					
74	293 - 296	19			3					
75	297 - 300	19	1			4				
76	301 - 304	19		2		4				
77	305 - 308	20				4				
78	309 - 312	20	1							
79	313 - 316	20		2						
80	317 - 320	20	1		3		5		7	

Wissel/ Sein Decoders met nummers 257-320 worden gestuurd met 2e (3e) digitaal systeem